



Pro-Snap and Batten Trim Application




Batten Trim

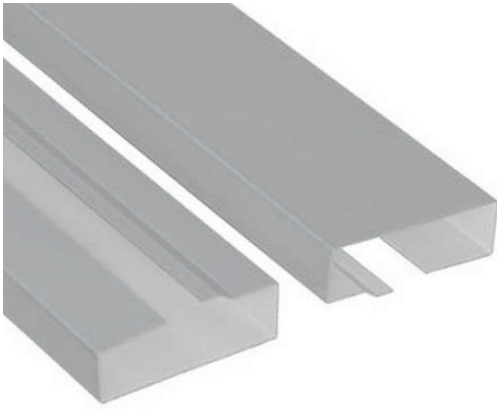

Position trim with down leg positioned to overlap side of the panel



Pro-Snap Siding

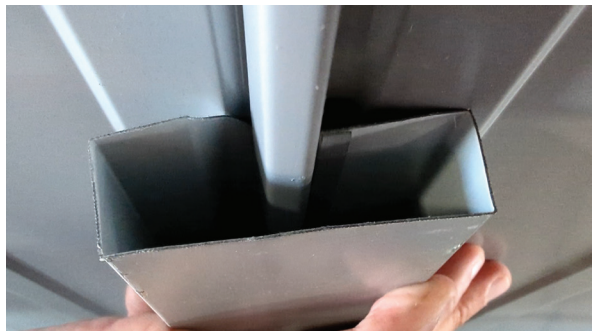

With even pressure, push batten trim on to the rib



Pro-Snap with Batten Trim



Press until back of batten trim is against the Pro-Snap panel