

PREMIUM PRO-SNAP® SNOW BAR CLIP INSTALLATION

1.




Align the clip over the Pro-Snap® seam.

2.



Make sure the set screws are on the panel side and the hook is on the lap side of the panel.

3.

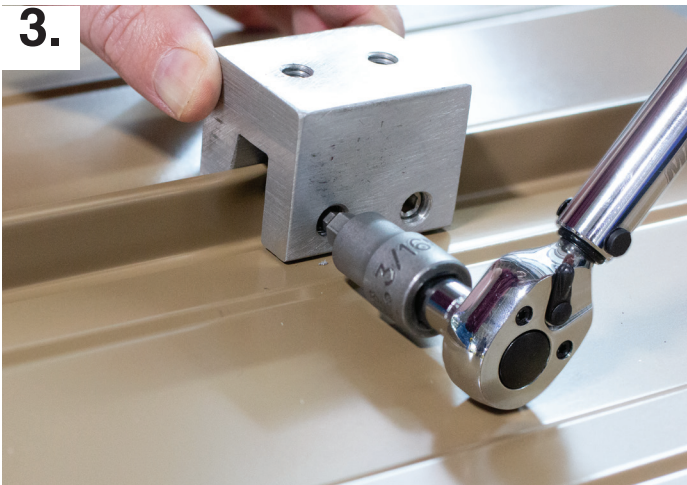

Tighten the set screws to a minimum of 50 in/lbs each using a calibrated torque wrench.

4.



Install 8' Premium Pro-Snap® Snow Bar using the supplied bolts.

Follow the Snow Retention brochure on MidwestManufacturing.com for recommended quantities and spacing of the Premium Pro-Snap® Snow Bars.

Warranty:

The following warranty is made in lieu of all other warranties expressed or implied. Recommendations for proper use of the product are based on tests believed to be reliable. Any goods proven to be defective due to materials may be replaced. If replacement is not feasible, Midwest Manufacturing may offer a merchandise credit to cover the product that it determines is defective. Replacement product or a merchandise credit is the sole and exclusive remedy for any defect. Acceptance of a replacement product or merchandise credit shall constitute a settlement and release all of the claims relating to the alleged defect. User shall determine the suitability of the product for its intended use and assumes all risks of its use or handling.